

The Kanger ProTank is the newest tank atomizer with great features and performance. It is 510 threaded and will work on all 510 threaded devices without need of an adapter.

Includes a Ego Cone cover for a sharp look on Ego batteries. Uses replaceable Atomizer Heads and a bottom Coil for better performance. The Pyrex Glass tank can be used with e-liquids that react badly with other clear tanks. Capacity is a full 2.5ml and it comes with two 2.5ohms coils. Replacement coils are available on our site

#### **How to fill PRO Tank Bottom Feeding Clearomizer:**

1. Hold the PRO Tank upside down with the drip tip facing down
2. Unscrew the bottom assembly from the tube
3. Fill with 3ml E-Juice by tilting the PRO Tank at a slight angle and dripping juice down the inside wall against the outer wall of Glass Tank.
4. Do not put eliquid into the center tube as it will leak out the bottom of clearomizer.
5. Screw the bottom assembly back onto tube.
6. Screw onto electronic cigarette device and you're ready to vape.

#### **How to change the atomizer head on Kanger PRO Tank Bottom Feeding Clearomizer:**

1. Unscrew the bottom assembly from the tube, remove the old coil and simply screw a new coil assembly into base.
2. Fill with 3ml E-Juice by tilting the Pro Tank at a slight angle and dripping juice down the inside wall against the outer wall of Glass Tank.
3. Do not put eliquid into the center tube as it will leak out the bottom of clearomizer.
4. Screw onto electronic cigarette device and you're ready to vape.

---

#### **Tips for using the Glass Bottom Feeding PRO Tank:**

- The metal tube in the center of this Clearomizer leads from the mouthpiece to the battery end. Avoid getting liquid in this tube when filling the Clearomizer.
- When unfastening the base (atomizer head) to refill the Clearomizer, the seals are temporarily broken and liquid will leak from the mouthpiece or escape into the center tube. Always wrap a cloth or piece of tissue around the mouthpiece when unfastening the base of the PRO Tank Clearomizer.
- Gurgling noise or leaks: This is a sign that liquid has found its way into the metal tube in the center of the Clearomizer (and usually occurs after a refill). Ridding the center tube of liquid will resolve the issue. To do so without emptying the tank, remove the Clearomizer from the battery, wrap a cloth or tissue around the battery end of the Clearomizer and blow through the mouthpiece.
- The atomizer head of the PRO Tank can loosen when unscrewing the tube or base. Always secure the atomizer head before re-installing the base of the PRO Tank.
- It is normal to find a small amount of liquid in the battery contact area when removing the Clearomizer or any atomizer. Always clean the battery threads before charging it.